



VLMX-88VW

8x8 HDMI 2.0 Matrix with Seamless
switching & videowall 18Gbps



User Manual

VER 1.02

Thank you for purchasing this product

Please read these instructions carefully before connecting, operating, or adjusting this product for optimum performance and safety. Please keep this manual for future reference.

A surge protection device recommended

This product contains sensitive electrical components that electrical spikes may damage, surges, electric shocks, lightning strikes, etc. The utilization of surge protection systems is highly recommended to protect and extend the life of your equipment.

Table of Contents

1. Introduction.....	1
2. Features.....	1
3. Package Contents.	1
4. Specifications.	2
5. Operation Controls and Functions.....	3
6. RS232/LAN Control Connection	5
6.1 RS232 Connector Connection.....	5
6.2 Network Control Connection.	5
7. PC Tool User Guide.....	6
7.1 Account's Authentication.....	6
7.2 Connect with PC Tool.....	6
7.3 Matrix Switch Page.....	6
7.4 Signal Setting Page.	8
7.5 FineTune Page.	8
7.6 Video Wall Page.....	9
7.6.1 Video Wall Context Menu.	10
7.6.2 Layout Save/Load	12
8. Control via Web.....	12

1. Introduction

The 18Gbps 8x8 seamless UHD Matrix can connect 8 HDMI sources to 8 HDMI displays. Supported video resolution is up to 4K60 4:4:4. The product supports the IR matrix, and IR matrix routing follows the video routing. Audio extract and insert are supported. The product supports one or more video walls with the RS232 command.

2. Features

- ☆ HDMI 2.0 and HDCP 2.2 compliant
- ☆ Supports 18 Gbps video bandwidth
- ☆ Supports seamless switching
- ☆ Supports video wall
- ☆ Supports IR matrix
- ☆ Supports HDMI audio extract
- ☆ Supports external L/R audio insert on HDMI stream
- ☆ Supports EDID management
- ☆ HDMI video output resolution up to 3840x2160@60
- ☆ Supports front panel, RS232, TCP/IP (LAN 10M/100M) control

3. Package Contents


- ① 1 x 8x8 seamless UHD Matrix
- ② 1 x AC Power Cord
- ③ 1 x Matrix IR Remote
- ④ 4 x IR Receiver cable (1.5 meters)
- ⑤ 4 x IR Blaster cable (1.5 meters)
- ⑥ 1× Cat6 cable
- ⑦ 1× USB to RS232 Cable
- ⑧ 1× User Manual

4. Specifications

Technical	
HDMI Compliance	HDMI2.0
HDCP Compliance	HDCP2.2
Bandwidth	18Gbps
Video Resolution	
Input	800x600@60Hz, 1024x768@60Hz, 1280x768@60Hz, 1280x800@60Hz, 1280x1024@60Hz, 1360x768@60Hz, 1366x768@60Hz, 1400x1050@60Hz, 1440x900@60Hz, 1600x1200@60Hz, 1680x1050@60Hz, 1920x1200@60Hz. 480p, 576p, 720p, 1920x1080i, 1920x1080p, 3840x2160@24Hz/25Hz/30Hz/50Hz/60Hz, 4096x2160@24Hz/25Hz/30Hz/50Hz/60Hz.
Output	1920x1080@60Hz, 3840x2160@30Hz, 3840x2160@60Hz, 1280x720@60Hz, 1024x768@60Hz, 1360x768@60Hz, 1600x1200@60Hz, 1920x1200@60Hz
HDMI Amplitude	T.M.D.S +/- 0.4Vpp
Differential impedance	100±15ohm
ESD Protection	Human-body Model: ±8kV (Air-gap discharge) , ±4kV (Contact discharge)
RS232/Ethernet Control	
Baud rate and protocol	Baud rate: 9600, Data bit: 8, stop bit: 1, no parity checking
Ethernet	IE10.0+, HTML5
Mechanical	
Housing	Metal Enclosure
Color	Black
Dimensions	430mm (L) X 300mm (W) X 44mm (H)
Weight	5kg
Power Supply	AC 110 - 240V
Power Consumption	100W (Max)
Operating Temperature	0°C ~ 40°C / 32°F ~ 104°F
Storage Temperature	-20°C ~ 70°C / -4°F ~ 158°F
Relative Humidity	10%~50% RH (Non-Condensation)

5. Operation Controls and Functions

Front Panel

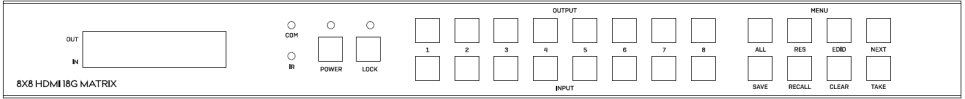

Item	Description
LCD Panel	Displays the current video selections
COM	Control commands indicator
IR	IR signal indicator
POWER	Power LED
LOCK	Front panel lock/unlock
OUTPUT	Output selection buttons 1~8
INPUT	Input selection buttons 1~8
ALL	Set all outputs to the next input selection
RES	Set the output scaler resolution
EDID	Set the EDID options for the next input selection
NEXT	Select the next available option
SAVE	Save the current matrix setting as a preset
RECALL	Set the matrix setting from a saved preset
CLEAR	Cancel the current command function
ENTER	Set the displayed option


- To switch matrix routing, press OUTPUT n + INPUT m+ TAKE by sequence.
- Press the button POWER to make the matrix enter or release the standby state. When standby, the power LED will be lighted.
- Press the LOCK button to lock or unlock the front buttons. When locked, the Lock LED will be lit.
- Press ALL + INPUT m + TAKE by sequence to switch input m to all the outputs.
- Press the SAVE + OUTPUT n to save the current routing scene as scene n. Up to 8 scenes can be saved.
- Press RECALL + OUTPUT n to recall routing scene n as current routing.
- Press RES + OUTPUT n + NEXT + TAKE to change the output resolution of the OUTPUT n port. Resolution Option

Number	Output Resolution Setting	Number	Output Resolution Setting
1	3840x2160@60Hz	9	1400x1050@60Hz
2	3840x2160@50Hz	10	1366x768@60Hz
3	3840x2160@30Hz	11	1360x768@60Hz
4	3840x2160@25Hz	12	1280x1024@60Hz
5	1920x1200@60Hz	13	1280x768@60Hz
6	1920x1080@60Hz	14	1280x720@60Hz
7	1920x1080@50Hz	15	1280x720@50Hz
8	1600x1200@60Hz	16	1024x768@60Hz


- Press EDID + INPUT m + NEXT + TAKE to change the EDID mode of port INPUT m. EDID options:


Number	Output Resolution Setting	Number	Output Resolution Setting
1	Manual	5	1920x1080@60Hz
2	3840x2160@60Hz	6	1280x1024@60Hz
3	3840x2160@30Hz	7	1280x720@60Hz
4	1920x1200@60Hz	8	1024x768@60Hz

Rear Panel

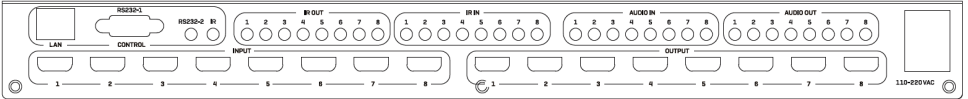

- LAN(10M/100M) and RS232 are for PC control.
- Analog Audio IN/OUT ports binds to corresponding HDMI ports.
For example:
If INPUT HDMI 1 signal is DVI, the matrix will use analog AUDIO IN 1 as HDMI 1 audio source (Note: Analog AUDIO IN is only available when the corresponding video input is DVI signal). Analog AUDIO OUT n will always output the same audio content with HDMI OUTPUT n.
- IR IN and IR OUT
IR IN/OUT is for remote control routing and follows the video routing.
For example:
If input HDMI m is routed to output HDMI n1 and n2 ports, then IR IN n1 and n2 ports will be routed to IR OUT m port.
Here is an illustration of the relationship between video and IR routing.

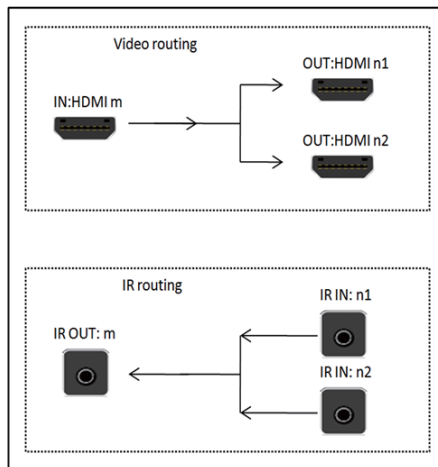

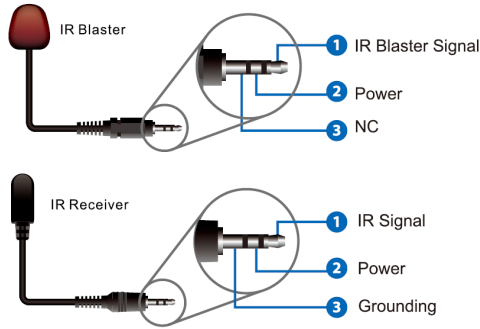


IR extender connectors (not as accessories)

6. RS232/LAN Control Connection


6.1 RS232 Control Connection

The product supports RS232 control. Connect the RS232 port of the product to a PC via an RS-232 to USB cable, as shown in the following figure:

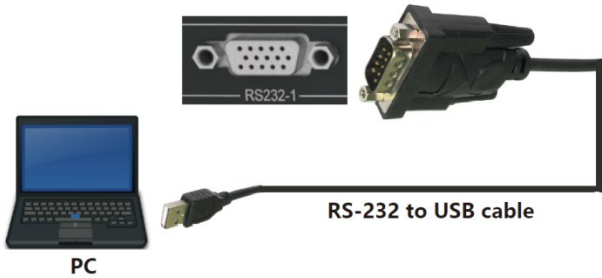

6.2 Network Control Connection

The product also supports Network control. Connect the LAN port of the product to a PC via a UTP cable, as shown in the following figure:

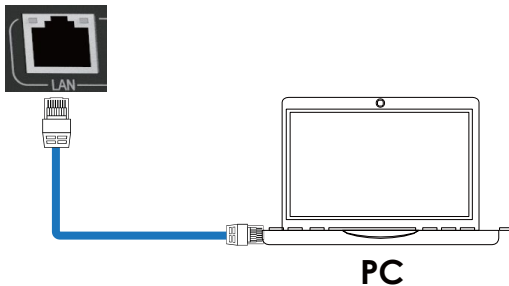

Note: Factory default network setting:

IP Type	Static IP
Static IP	192 . 168 . 0 . 247
Subnet Mask	255 . 255 . 255 . 0
Gateway	192 . 168 . 0 . 1

7. PC Tool User Guide

7.1 Accountant's Authentication


Before running the PC tool, the password is needed for authentication.

The default password of Administrator (access to all features: 111111)

The default password of User (access to all features, except OSD function): 000000

7.2 Connect with PC Tool


1. The default PC tool's UI style is as below.

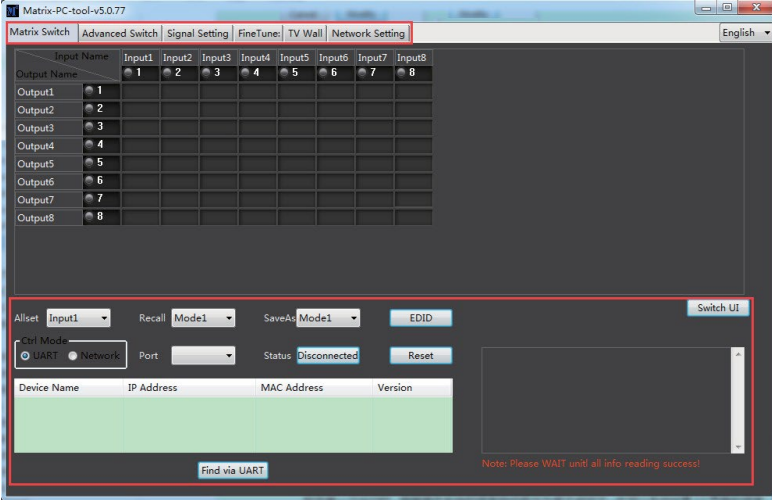


2. You can select **UART** (with RS-232 cable) or **Network** to connect; the baud rate is 9600 bps.

3. Default IP address: 192.168.0.247.


7.3 Matrix Switch Page

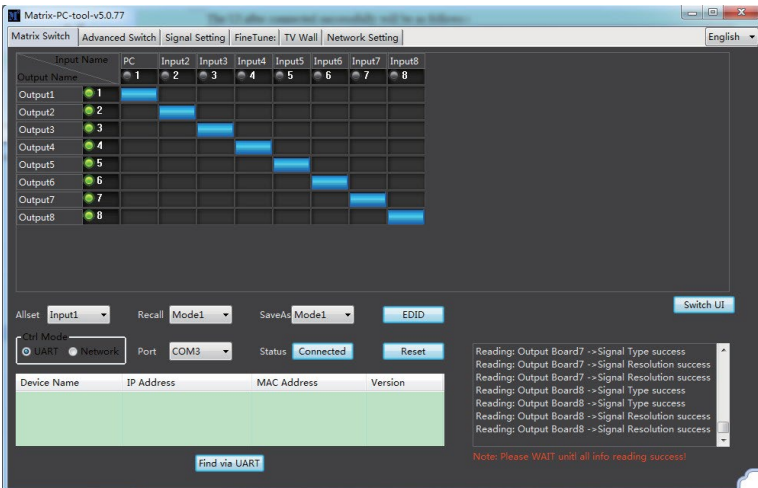

1. There are 3 options for the Matrix Switch page; the user can press the "Switch UI" button to change the UI style. Suggest using the default one.
2. There is a shortcut button to switch one input port to all output ports, which is All set; for example, switch input 1 to all outputs, the user can select

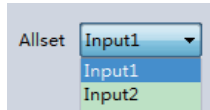


3. Recall mode: Recall an input/output routing scene which already been saved before. The device supports a maximum of 8 scenes.
 4. Save mode: Save the current input/output routing in one index. Maximum 8 modes supported.
- Note:** The Save/Recall button works with the front panel save/recall control and the Save/Load function on the video wall page.
5. System reset: The PC tool supports reset systems to recover to factory configuration.
 6. EDID Control: Click the "EDID" button on the Matrix Switch page, and there will be a pop-up EDID control window. Users can do the following operations:

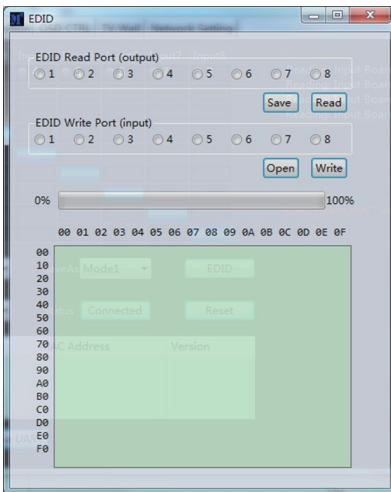

- a) Read EDID: Select the output port, then click the "Read" button to read EDID.
- b) Write EDID: First, read an EDID from the output port, open an EDID file that was saved before, then select the input port, and click the "Write" button to write EDID.
- c) Save EDID: After reading EDID successfully, click "Save" button and select the save path and file name for saving.
- d) EDID Manual: The written EDID above will be the manual EDID data. When the user selects EDID mode with Manual mode by a front panel for one input port, the matrix system will use this data as the EDID data for the port.

7.4 Signal Setting Page

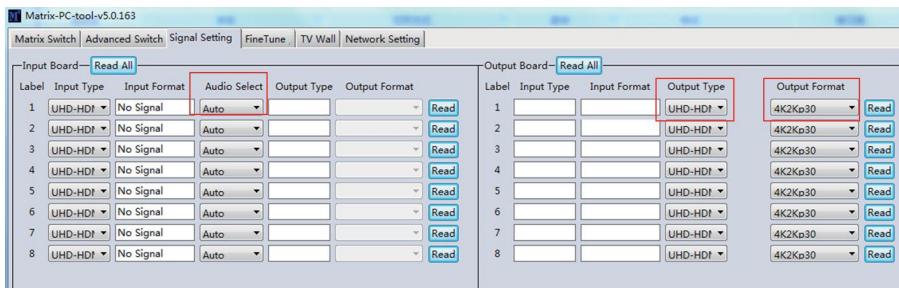

1. Audio Select

There are two options for input Audio Select.

- a) Auto: If the input source is an HDMI signal, the system will get the embedded audio; if the input source is a DVI signal, the system will get the corresponding analog audio.
- b) External: The system will get the corresponding analog audio.

2. Output Type


Four input-output types options are UHD-HDMI (HDCP OFF), UHD-DVI, UHD-HDCP-1.4, and UHD-HDCP-2.2.

3. Output Format

User can set the output resolution: 3840x2160@60, 3840x2160@50, 3840x2160@30, 3840x2160@25, 1920x1200@60, 1920x1080@60, 1920x1080@50, 1600x1200@60, 1400x1050@60, 1366x768@60, 1360x768@60, 1280x1024@60, 1280x768@60, 1280x720@60, 1280x720@50, 1024x768@60.

7.5 FineTune Page

You can read and set each output's Brightness/Contrast/Saturation/Sharpness.

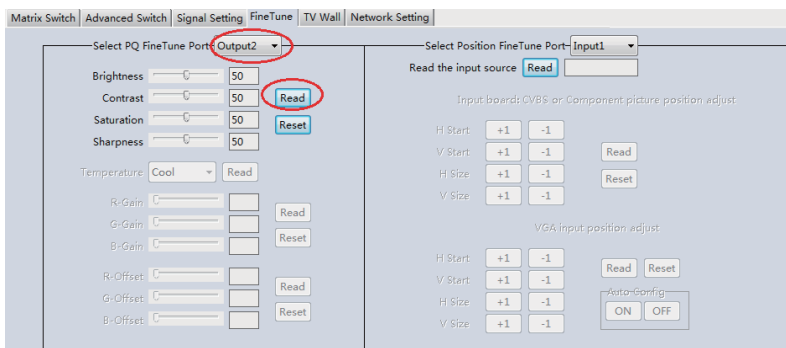


Note: Do not change the default settings without special conditions.


If there is a problem after changing, click "Reset" to return to the factory settings.

7.6 Video Wall Page

This page is used to configure a group of outputs to function as a video wall.

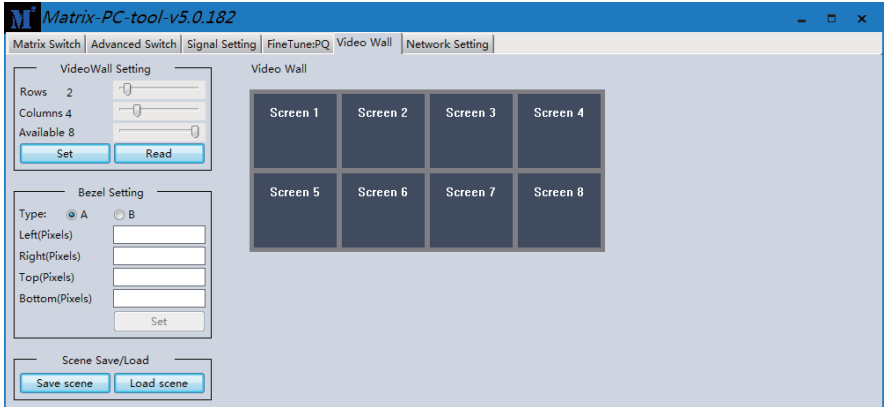



1. Use the Video Wall Setting controls to change how the displays are arranged on the Video Wall page:
 - a. Adjust the Rows and Columns sliders to change the displayed screen arrangement to permit proper Drag-and-Select of the desired screens for the video wall.
 - b. Change the available slider to set how many outputs will be used for the Video Wall.
 - c. Click the "Set" button to change the Screen configuration.
2. Use the left mouse button to drag-select the screens set for video wall mode. The selected screens will be shown as bright blue.
3. Use the right mouse button to open a menu.
4. Select "Screen Stitching" from the menu to program the video wall mode. The selected screens will now be shown as bright green.
5. To change the displayed image: right-click to open the pop-up menu and select the desired input from the "Input Select" menu option.
6. Repeating steps 2 ~ 5 above with a separate set of outputs allows creating of a second video wall. However, changing the Rows, Columns, and Available sliders will automatically delete the current video wall set up when the "Set" button is clicked. The following exampleshows a more unusual video wall set-up of two video walls with one 2x2 wall and one 2x1 configuration:

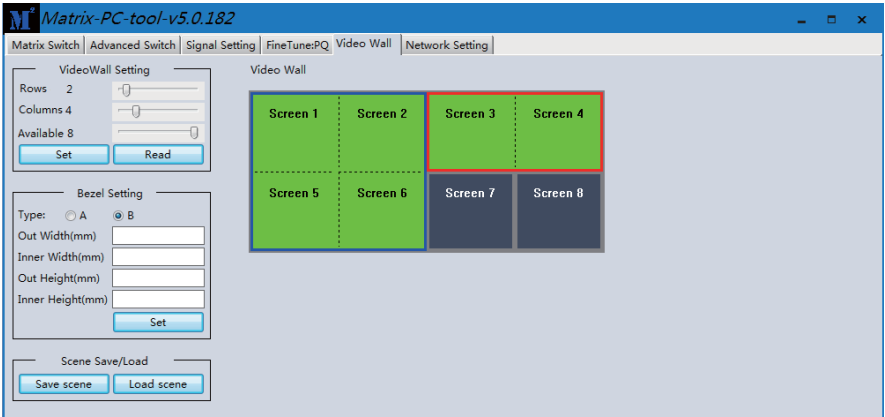

7.6.1 Video Wall Context Menu

Right-clicking on any of the screen icons will display the following context menu:

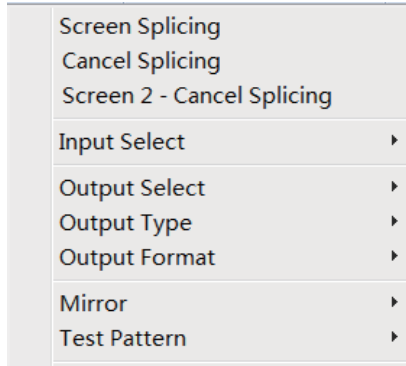

Screen Stitching	This option connects the selected screens into a video wall configuration.
Cancel Stitching	Return the Video Wall configuration to normal outputs.
Screen x – Cancel Stitching	<p>Remove the single screen x from the video wall to allow the displaying of another full-frame image within the video wall configuration, as shown in this example:</p>  <p>Video Wall display with bezel compensation and different full frame image on display 3</p>
Input Select	Use the sub-menu to select the input to display on the video wall or the second input image shown in the above example.
Output Select	This option is only available for any screen not assigned to a video wall mode.
Output Type	This option is only available for any screen not assigned to a video wall mode.
Output Format	This option is only available for any screen not assigned to a video wall mode. It allows the setting of the output resolution for the selected screen output.
Mirror	Two sub-options: OFF (default), ON (H+V Mirror) When you select "ON," you can make a 180° rotation with the selected screen.
Test Pattern	The output will display the Color Bar pattern when Test Pattern is enabled.

Bezel Setting

The Bezel Setting section allows the entry of values to compensate for the display bezel thickness. These values may be entered as pixels (Type A) or millimeters (Type B).

Type A Bezel Settings


The image size will be adjusted to allow for the number of pixels entered in each entry box. Click the "Set" button to view the effect of the new values.

Type B Bezel Settings

The image size will be adjusted to allow for the Inner and Outer display dimensions in each entry box. Click the "Set" button to view the effect of the new values.

Bezel Compensation

The following images demonstrate the effect of not having bezel compensation and what correctly configured bezel compensation settings should produce:

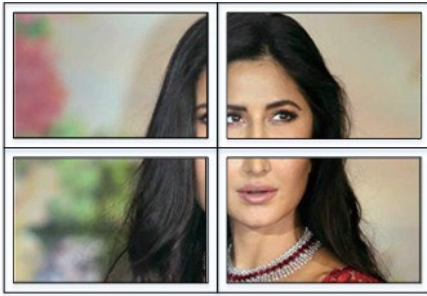

No Bezel Compensation



Correct Bezel Compensation

7.6.2 Layout Save/Load

The Save Scene/Layout and Load Scene/Layout buttons allow a video wall configuration to be saved or recalled at any time. Up to 10 configurations, each with its name, can be saved or recalled. Each Scene can optionally be given a name to identify that video wall scene setup when saving.

8. Control via Web

- If you do not know the matrix IP address: click on the Network Settings page, then click "Search Device," and then select the device that you found; click "Open Website" to open the web control website, or can input the IP on the web browser, then enter the username (admin) and password (admin) so that you can control the matrix switch function and use the website.

NOTE: The computer IP and matrix IP must be in the same segment and the same local area network; For example, if the matrix's IP is 192.168.1.xxx, then the computer IP must be 192.168.1.yyy; otherwise, you need to change the matrix's IP or the computer's IP. The browser must support the HTML5 feature, which must be IE10 and above.

Device Name	IP Address	MAC Address	Version
USR-K3	192.168.0.247	D8 80 4C B9 47 DF	3013

Basic config

UPNP Port: 6432 Device Name: USR-K3

HTTP Port: 80 MAC Address: D8 80 4C B9 47 DF

Device ID: 1 IP Type: Static IP

Device ID Type: 0 Static IP: 192 | 168 | 0 | 247

User Name: admin Subnet Mask: 255 | 255 | 255 | 0

Password: admin Gateway: 192 | 168 | 0 | 1

Select config port

Port 0 Port 1 Port 2

Baud Rate: 9600

Parity/Data Bit/Stop Bit: None | 8 | 1

Stream Control: None

Device Port: 23

PC Port: 23

PC IP/Domain: 192.168.0.201

Work Mode: TCP Server

TCP Server connect co.: 8

TCP Server style: Transparent transmiss

ModbusTCP: None

Package time(ms): 0

Package Length(Byte): 0

Sync BaudRate(RFC2217 similar):

- If the matrix IP address is known: Input the IP on the web browser, then enter the username (admin) and password (admin) so that you can control the matrix switch function and use the website.

Note: the browser must support the HTML5 feature, which must be IE10 and above.

8. Application Example

